

# SPRINGFIELD®

## PRECISETEMP™

### 5 IN 1 DIGITAL DESKTOP ORGANIZER WITH EVENT ALERT

**Model No. 91590**  
SFD Version

#### **Instruction Manual**



#### **FEATURES AND SPECIFICATIONS**

- Indoor thermometer – °C / °F selectable
- 23 hr. 59 min. countdown timer
- 12/24 hour selectable clock with alarm and snooze function
- Calendar with day of the week display
- Programmable event alert with a selection of 8 musical sounds
- Accessory holder
- Requires (1) CR2032 button cell battery (included)

#### **BATTERY INSTALLATION**

- Slide the silver clock / thermometer LCD unit downward and separate it from the plastic accessory holder.
- Locate the battery compartment at the back of the unit and remove the screw holding the battery compartment door.
- Open the door and remove the plastic battery insulator.
- Replace the battery door. Do not over-tighten the screw.

## **OPERATING INSTRUCTIONS**

- After installing the battery or pressing reset, the unit will be in normal time mode with the default time of 12:00 showing. TIME will show at the top left of the LCD display. Press MODE to toggle between normal time mode and alarm mode.
- When setting time, alarm and timer, the ADJ button will increase the number being set and the C/F button will decrease the number being set.

### ***•C / •F Selection***

- Press C/F to display the temperature in °Celsius or °Fahrenheit.

### ***Setting the Clock and Calendar***

- In normal time mode press SET and the hour will be flashing.
- Press ADJ or C/F to set the hour.
- Press SET and the minutes will be flashing.
- Press ADJ or C/F to set the minutes.
- Press SET and the year will be flashing.
- Press ADJ or C/F to set the year.
- Press SET and the month will be flashing.
- Press ADJ or C/F to set the month.
- Press SET and the date will be flashing.
- Press ADJ or C/F to set the date.
- Press SET to return to lock in the settings.

### ***Setting 12 or 24 hour Clock***

- Press ADJ to select 12 or 24 hour timing.

### ***Setting the Alarm***

- Press MODE to switch to alarm mode. ALARM will show at the top left of the LCD display.
- Press SET and the alarm hour will be flashing.
- Press ADJ or C/F to set the alarm hour.
- Press SET and the alarm minutes will be flashing.
- Press ADJ or C/F to set the alarm minutes.
- Press SET and snooze time interval will be flashing.
- Press ADJ or C/F to select the number of minutes in between snooze alarms. (1 to 60 minutes)
- Press SET and the alarm tone selection number will be flashing.
- Press ADJ or C/F to select the alarm tone. As you scroll to your selection each alarm tone will be audible to help you with your selection.
- Press SET to lock in the settings.

### ***Activating the Alarm***

After the alarm selections have been made, while in alarm mode press ADJ once to activate the alarm only. The alarm icon will show on top of the alarm time. Press ADJ a second time to activate the snooze function. SNOOZE will show on top of the alarm time.

### ***Silencing the Alarm and Activating the Snooze Function***




- After the alarm has sounded, press any button to silence the alarm.

- The alarm icon will remain on the display and the alarm will sound every day at the pre-set time until the alarm is de-activated.
- If you have set the snooze function, the alarm will sound again at your pre-set interval.

#### ***De-activating the Alarm and Snooze functions***


- In alarm mode press ADJ to deactivate the alarm and snooze functions. The icons will no longer appear at the top of the display.

### **COUNTDOWN TIMER**

- Press  to get to the timer display. TIMER will show at the top of the display.
- The timer can be set up to 23 hours, 59 minutes and 59 seconds.
- Press SET and the hours will be flashing.
- Press ADJ or C/F to set the hours.
- Press SET and the minutes will be flashing.
- Press ADJ or C/F to set the minutes.
- Press SET and the seconds will be flashing.
- Press ADJ or C/F to set the seconds.
- Press SET to lock in the countdown time.
- Press  to activate the timer.
- By pressing  you can stop or start the timer at any time.
- When the timer counts down to 0:00 and the alert sounds press any button to stop the audible signal. The display will show the original timer setting.

### **EVENT ALERT**

This feature will allow you to pre-program the alarm to sound at any time within the calendar setting range. (current to year 2099).

- Press  three times to get to the event alert display.
- Press SET and the hour will be flashing.
- Press ▼ or ▲ to set the hours.
- Press SET and the minutes will be flashing.
- Press ▼ or ▲ to set the minutes.
- Press SET and the year will be flashing.
- Press ▼ or ▲ to set the year.
- Press SET and the month will be flashing.
- Press ▼ or ▲ to set the month.
- Press SET and the date will be flashing.
- Press ▼ or ▲ to set the date.
- Press SET to lock in the settings.

### **MUSIC**

Your organizer will play music at any time. When the display is on normal time press the ▼ button to start the music. The music icon will show at the top of the display and the unit will loop through the musical selections. Press ▼ to turn off the music.

### **RESET**

At any time the unit can be reset, which will clear all stored data. Locate the RESET at the front of the unit. Insert the end of a paper clip into the RESET hole and push the button. Re-enter your clock, calendar and alarm settings.

### LIMITED WARRANTY

Springfield warrants this product to be free from defects in workmanship or material for a period of one year from the date of purchase. **ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO WARRANTIES OF FITNESS AND MERCHANTABILITY ARE HEREBY LIMITED IN DURATION TO A PERIOD ENDING ONE YEAR FROM THE DATE OF PURCHASE.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific legal rights, which vary, from state to state. During the warranty period, such defects will be repaired or the defective instrument will be replaced at our option. This warranty does not cover damages through accident or misuse. **IN ADDITION, SPRINGFIELD IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES INCURRED AS A RESULT OF DEFECT.** Repair or replacement will be made at our option without additional charge if the instrument is returned postpaid with \$4.00 for return postage and handling to:



76 Passaic Street, Wood-Ridge, NJ 07075-1091

1-888-809-3284

Made in China

©2005 Springfield Precision Instruments, Inc.

All Rights Reserved